SOUND & LIGHTING

Warranty

We at Talent are dedicated to providing our customers with professional, high quality stage and studio accessories. As such, all Talent products are warranted free from defects in material and workmanship for a period of One Year from the date of purchase. Warranty registration is not required, but purchasers are asked to retain their receipt as proof of purchase. Warranty does not apply to misuse, abuse, neglect, accident, improper use, etc. For complete customer satisfaction, Talent resellers are asked to act as agents for the purpose of handling warranty claims. Please return your Talent product to your place of purchase prepaid. Many Talent resellers require a return authorization (also known as an RA or RMA). Please contact your Talent reseller for more details or visit TalentAudio. com on the web.

Megaphone Portable Rechargeable Battery Included 50W

Model: LMP-50 User Manual



talentaudio.com

Overview:

The Talent LMP-50 50-watt megaphone portable features a built-in rechargeable battery, MP3/USB/SD readers, a 3.5 mm AUX in, siren, and removeable handheld microphone. Delivering up to 1,200 yards of coverage, the megaphone is perfect for both indoor and outdoor use. The LMP-50 offers three audio modes including talk, siren, and media playback from a USB/SD reader. In addition, the LMP-50 also offers a 3.5 mm AUX jack for use with external audio devices. With a durable build and long-life battery power, the LMP-50 is great for portable use.

Box Contents:

- LMP-50 megaphone
- Rechargeable battery
- USB wall power adapter

Features:

- 50 watts of power suitable for indoor and outdoor use with 1,200 yards of coverage
- Three audio modes including talk, siren, media play back via USB/SD readers and MP3 digital audio
- Ergonomic pistol grip with durable, lightweight chassis and remote handheld microphone
- Rechargeable Li-Ion battery for portable use or power via eight Type C batteries
- Play audio from external device via built-in 3.5 mm AUX in jack



- 3. USB Input
- 4. SD Card Input

- 7. Track Back (Hold for Volume Down)
- 8. Track Forward (Hold for Volume Up)

Operating Instructions:

- 1. When carrying the megaphone on the shoulder, press the "press- to-talk" power ON-OFF switch, on the left side of the included microphone.
- 2. When holding the megaphone at the handle, hang the microphone on the bracket located on the rear of the megaphone, then press the "press-to-talk" power ON-OFF switch.
- 3. Direct the megaphones horn in the desired direction for the sound to travel, and speak into the microphone.
- 4. Adjust the volume control, on the right side of the microphone to the appropriate volume level.
- 5. If playing music from an SD card of USB drive, switch the mode switch to USB/SD on the handle of the megaphone.
- 6. If using the siren, switch the the input source on the handle to Siren.

Battery Replacement:

- 1. Loosen the battery compartment on the back of the megaphone body, the cover screws off
- 2. Insert eight (8) Type-C batteries, be sure to follow correct polarity

Battery Charging:

- 1. The megaphone has a rechargeable battery that charges via a USB wall power adapter
- 2. Connect the battery to the USB power adapter
- 3. Set the battery to "DC Charging" and the battery will begin charging, a red light will light when charging and turn green when fully charged (charge time will be approximately 8.5 hours for a full charge)
- 4. Once charged, insert the battery back into the megaphone with the power cable exposed
- 5. Once inserted change the battery to "DC Output" mode to enable battery power

Specifications:

- Power output:..... 50W max
- Projection distance: Up to 1,200 yards
- Audio modes:..... talk, siren, USB/SD/memory playback
- Media readers:.....USB/SD
- Battery: Rechargeable 11.1V Li-Ion, 1,500 mAh (11.6 Wh, 166g)
- Battery (non-rechargeable): ... 8 x Type C batteries (not included)
- Dimensions: 9.5" Dia. X 13.8" L